


GB AWM 8500

PROGRAMME CHART

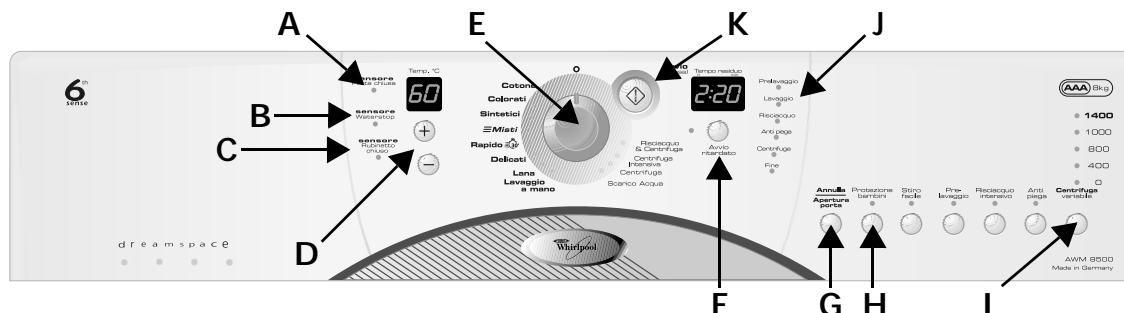

- A. "Door Locked" indication
- B. "Water Stop" indication
- C. "Water Tap Closed" indication
- D. Temperature Selection buttons
- E. Programme Selector Knob
- F. "Start Delay" button
- G. "Reset/unlock door" button
- H. "Child Lock" button
- I. "Spin Speed Reduction" button
- J. Programme sequence indicator
- K. "Start/Pause" button



Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically and a signal sounds.

* : optional / yes: dosing required.

Programme	Care labels	Type of wash/Notes	Max. Load kg	Detergents and additives				Special Options						Max. Spin Speed rpm	Temperature °C
				Softener	Bleach	Main Wash	Prewash	Start Delay Avvio ritardato	Easy Ironing Stiro facile	Prewash Pre-lavaggio	Intensive Rinse Risciacquo intensivo	Rinse Hold Anti piega	Speed reduction Centrifuga variabile		
White Cotton Cotone		Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>With heavily soiled laundry the additional "Prewash" option can be selected as well.</i>	8.0	*	*	Yes	*	*	*	*	*	*	*	1400	20 to 95
Coloured cotton Colorati	 	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	8.0	*	*	Yes	*	*	*	*	*	*	*	1400	20 to 60
Easy Care/Synthetics Sintetici	 	Slightly to normally soiled blouses, shirts etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	3.5	*	*	Yes	*	*	*	*	*	*	* ¹⁾	1000 ¹⁾	20 to 60
Daily Load Misti	 	Programme for slightly to normally soiled fabrics made of cotton and/or synthetic fibres.	3.5	*	*	Yes	—	*	*	—	*	*	*	1400	20 to 60
Chrono Rapido	 	Slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	3.5	*	—	Yes	—	*	*	—	*	*	*	1400	20 to 30
Delicates Delicati		Curtains and delicate dresses, skirts, shirts and blouses.	2.5	*	*	Yes	*	*	*	*	*	*	* ¹⁾	1000 ¹⁾	20 to 40
Wool Lana		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	2.0	*	—	Yes	—	*	*	—	—	*	* ¹⁾	1000 ¹⁾	20 to 40
Handwash Lavaggio a mano		Textiles made of silk, linen, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.</i>	2.0	*	—	Yes	—	*	*	—	—	*	* ²⁾	400 ²⁾	20 to 40
Rinse + Spin Risciacquo & Centrifuga	—	Same as the last rinse and the final spin in the "Coloured Cotton" programme.	8.0	*	—	—	—	*	—	—	*	*	*	1400	—
Intensive spin Centrifuga Intensiva	—	In this programme spinning is intensive. Same as the spin cycle in the "Coloured Cotton" programme.	8.0	—	—	—	—	*	—	—	—	—	*	1400	—
Spin Centrifuga	—	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	3.5	—	—	—	—	*	—	—	—	—	* ¹⁾	1000 ¹⁾	—
Drain Scarico acqua	—	Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".	8.0	—	—	—	—	*	—	—	—	—	—	—	—

¹⁾ For improved garment care spin speed is restricted to 1000 rpm in this programme.
²⁾ For improved garment care spin speed is restricted to 400 rpm in this programme.

CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approximate programme duration* (hours : minutes)
White Cotton	95	8.0	80**	2.60	2:20
Coloured cotton	60	8.0	72	1.45	2:15
Coloured cotton	60	3.5	45	1.10	1:15
Coloured cotton	60	1.0	25	0.70	1:00
Coloured cotton	40	8.0	72	0.75	2:05
Easy Care/Synthetics	40	3.5	55	0.55	1:15
Daily Load	40	3.5	45	1.00	1:00
Chrono	30	3.5	35	0.35	0:30
Delicates	30	2.5	65	0.45	0:50
Wool	40	2.0	60	0.50	0:35
Handwash	30	2.0	60	0.30	0:31

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time.

** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

ADD DETERGENT, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergent as described in the programme table or in the chapter "Detergent and Additives" of the instructions for use.

1. Turn the **programme selector knob** to the desired programme.
2. The remaining time display shows the duration of the chosen programme (in hours and minutes) and the pilot lamp of the **"Start/Pause"** button lights up.
3. The programme sequence and the predefined spin speed indicators corresponding to the selected programme light up. The recommended temperature (see the indicator) can be altered by pressing the "+" or "-" button.

SELECT ANY DESIRED OPTION

Selecting any option the indication lights up.

When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically and a signal sounds.

"Easy Ironing" button

- Can be used together with all programmes to reduce creasing.
- Increases the water quantity and the clothes are spun very gently.

"Prewash" button

- Only for heavily soiled laundry (e.g. sand, granular dirt). The cycle time increases approx. 15 minutes.

"Intensive Rinse" button

- More water and a longer time in rinse cycle is added.
- This option is particularly suitable for areas with very soft water, for baby clothes and to help people with allergies.

"Rinse Hold" button

- The laundry remains in the last rinse water without being spun: this prevents creasing and colours from changing.
- This option is particularly recommended for the programme "Synthetics" or "Delicates".
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

Note: The programme starts to "Rinse Hold" as soon as the "Rinse Hold" indicator light in the programmes display lights up.

Terminate the "Rinse Hold" option:

- Press the "Rinse Hold" button again; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the **"Start/Pause"** button again when flashing.

"Spin Speed Reduction" button

- Every programme has an automatic predefined maximum spin speed.
- Press the button to set another spin speed.
- If the spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

START DELAY

The "Start Delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Select programme, temperature and options.
- Press the "Start Delay" button to select the delay time by 1 to 23 hours;
- Press the **"Start/Pause"** button.
- The time delay indication disappears when the programme starts and it is replaced by the remaining time.
- The number of hours preselected can later be reduced pressing again the "Start Delay" button.

To cancel the "Start Delay".

- Turn the programme selector to the "0" position.
- Reselect the desired programme and options and press the **"Start/Pause"** button.

PROGRAMME START

Turn on the tap and press the **"Start/Pause"** button. The pilot lamp of the **"Start/Pause"** button lights up.

The indicator lamps shows the sequence reached in the programme. After starting the programme, the sequence indication runs from top to bottom through Prewash, Wash, Rinse, Spin.

When a sequence of the programme is finished the corresponding lamp goes out.

ADD WASHING/DOOR LOCK

Each time a programme starts the door is locked, the "Door Locked" indication light comes on and approx. 0.5 litres of water enters the machine. In the programmes White Cotton, Coloured Cotton, Easy Care/Synthetics, Daily Load and Rapid Plus, for 10 minutes at the beginning of the Main Wash the programme can be interrupted by pressing the **"Start/Pause"** button and the door can be opened again, e.g. to add more washing. After this time, the door remains locked until the end of the programme and must on no account be forced open. You will find more information about door locking in the Instructions for use.

PROGRAMME END

- The time remaining is "0:00" and the "End" light is on.
1. Turn the programme selector knob to the "0" position.
 2. Turn the tap off and leave the door ajar to allow the drum to dry out.

CHANGE THE PROGRAMME, TEMPERATURE, OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to interrupt the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

RESET / UNLOCK DOOR BUTTON

Press the "Reset / Unlock door" button (**"Annulla / Apertura porta"**) for at least 3 seconds. Any existing water is drained out before the door can be opened. Caution, the washing could still be hot!

CHILD LOCK

Detailed information can be found in the instructions for use.

The controls can be locked to avoid interference by children.

1. If the machine is off:
Turn the programme selector knob from the "0" position to any programme. Do not press the **"Start/Pause"** button. Press the "Child Lock" button for 5 seconds. The "Child Lock" indicator lights up. Turn the programme selector knob to the OFF position "0" again.
2. While a programme is running:
Press the "Child Lock" button for 5 seconds. The child lock indicator will light up.

Now, in spite of the programme selector knob being turned, no programme can be started or altered. However, a running programme can be stopped at any time (e.g. in an emergency), by turning the programme selector knob to "0". Attempts at changing during the running programme are signalled by the lamp flashing. The indicator light for the actual programme running goes on. To unlock the controls, the machine must either have a programme running or be in select mode. Press the "Child Lock" button for 5 seconds. The child lock lamp will go out.

Whirlpool is a registered trademark of Whirlpool USA

5019 301 15138